 


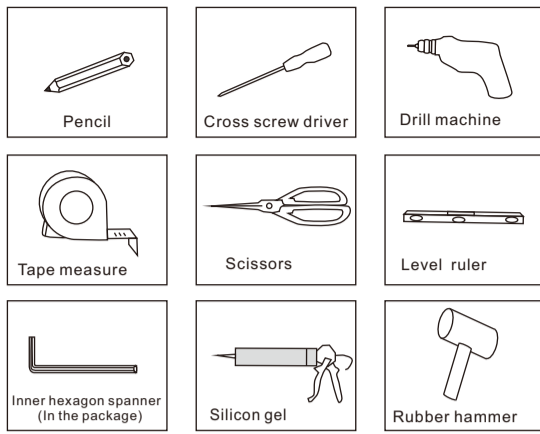


INSTALLATION MANUAL


TOOL PICTURE

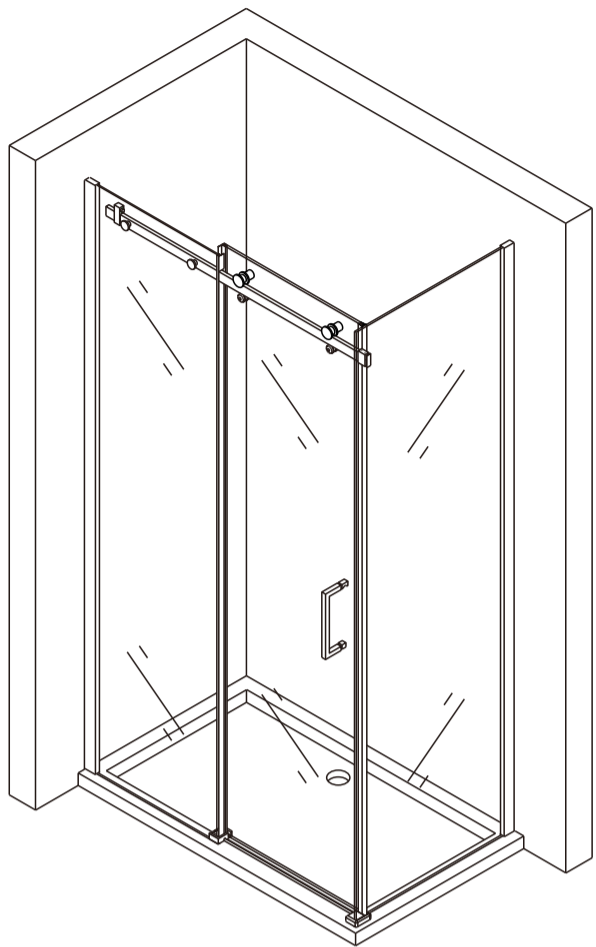

Accessory list

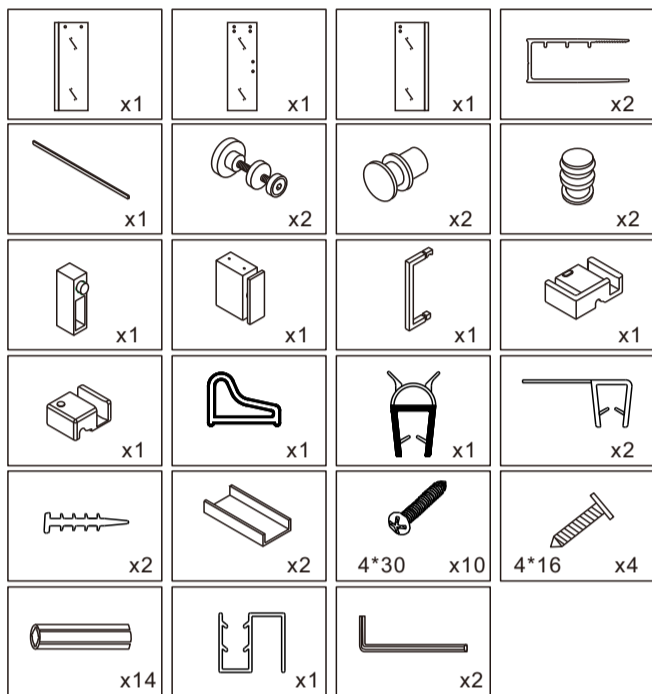






ATL-802N

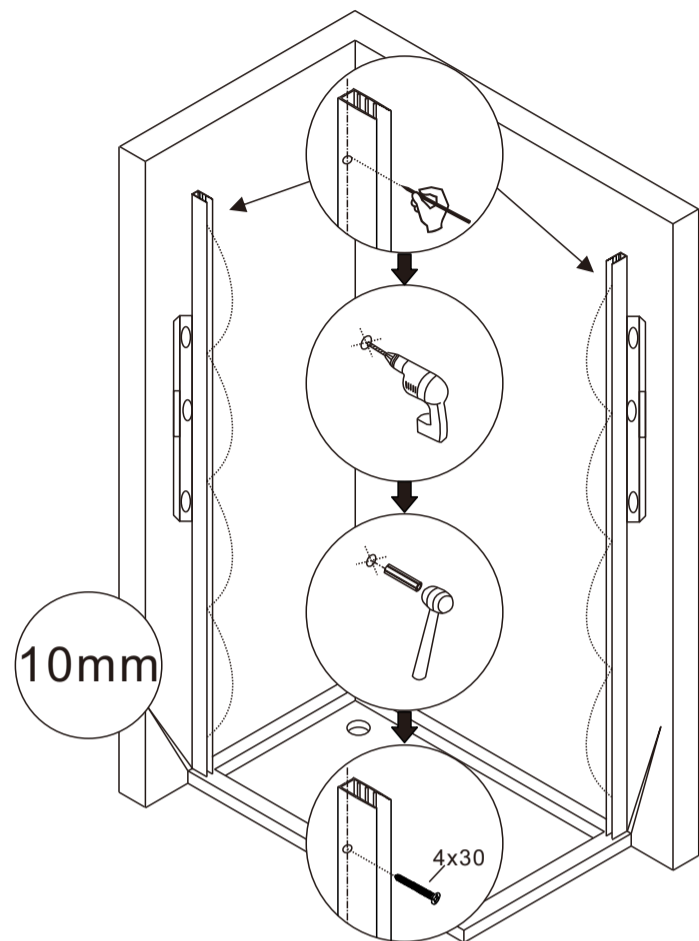

1

2


 
 
3

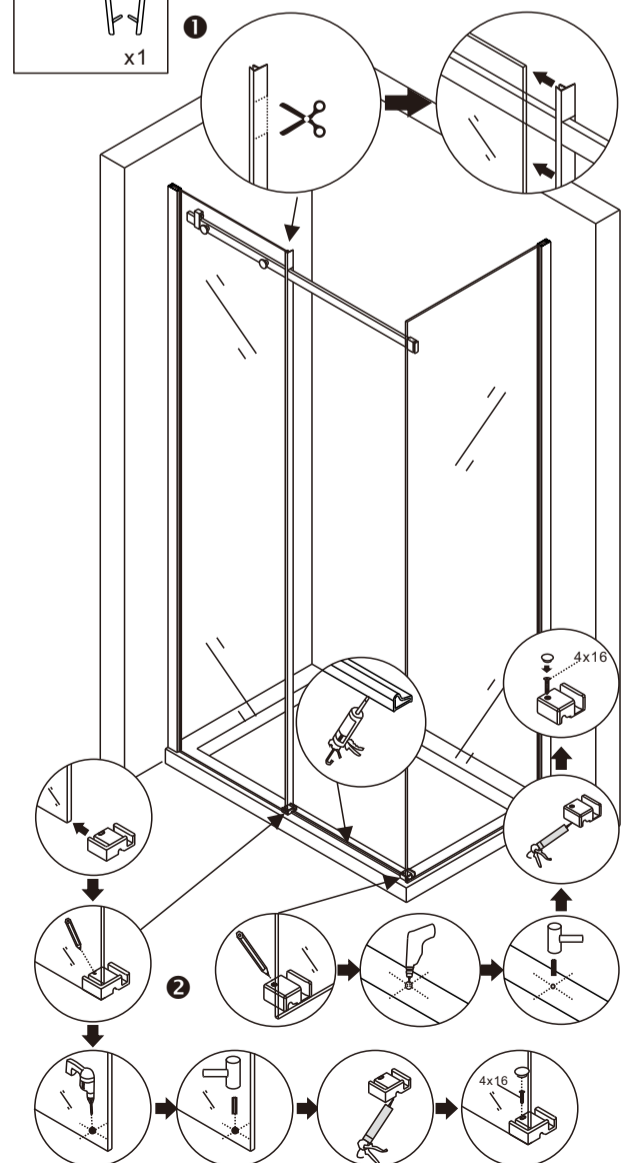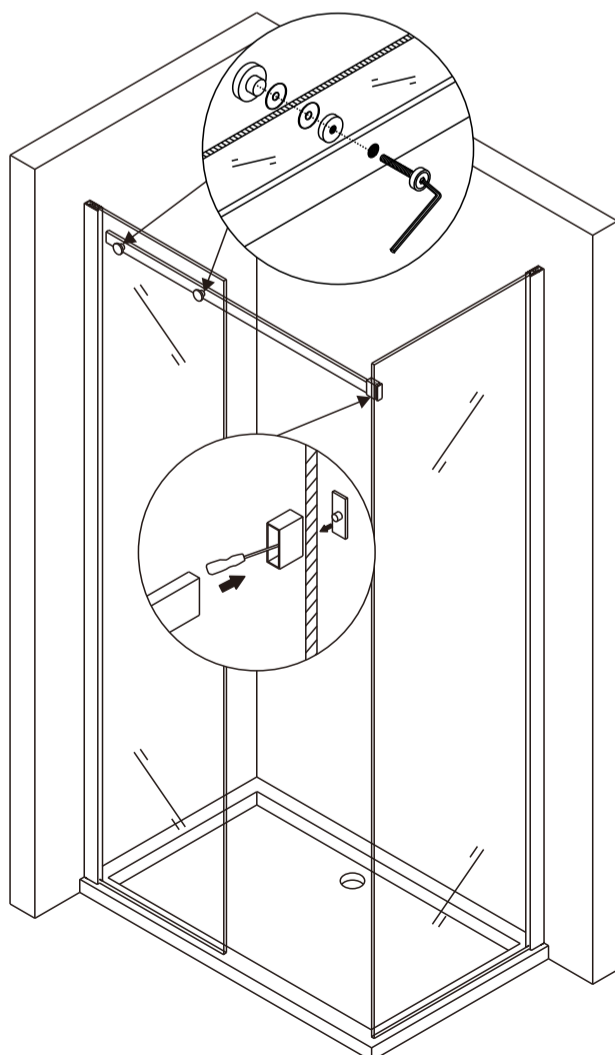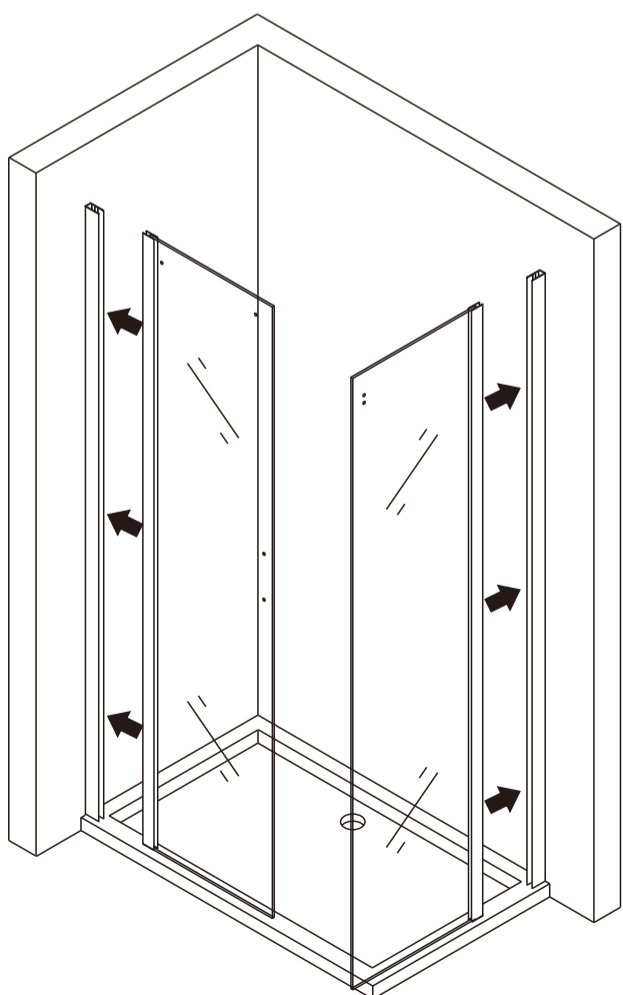


4

5

  
6

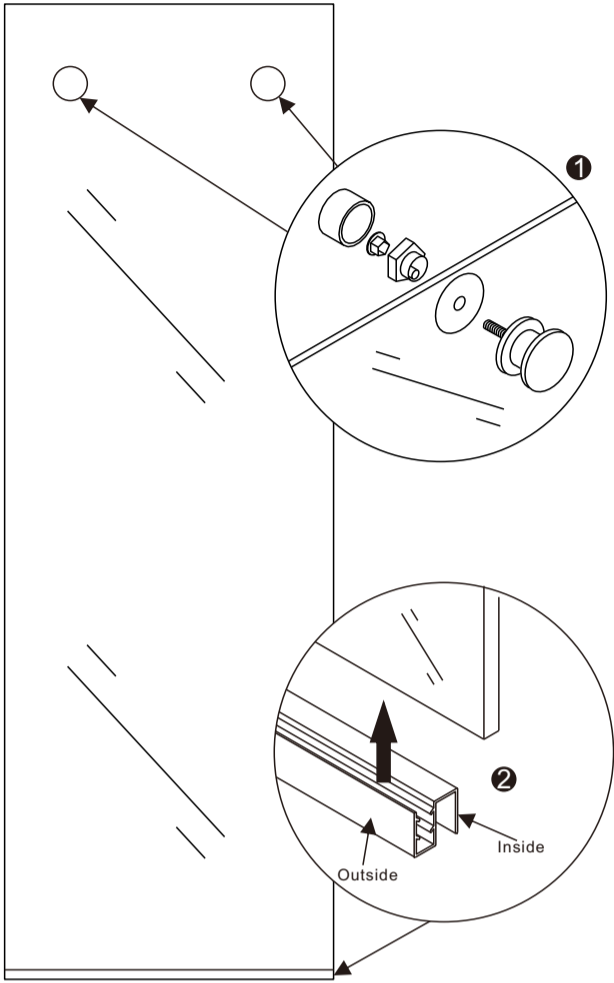



7

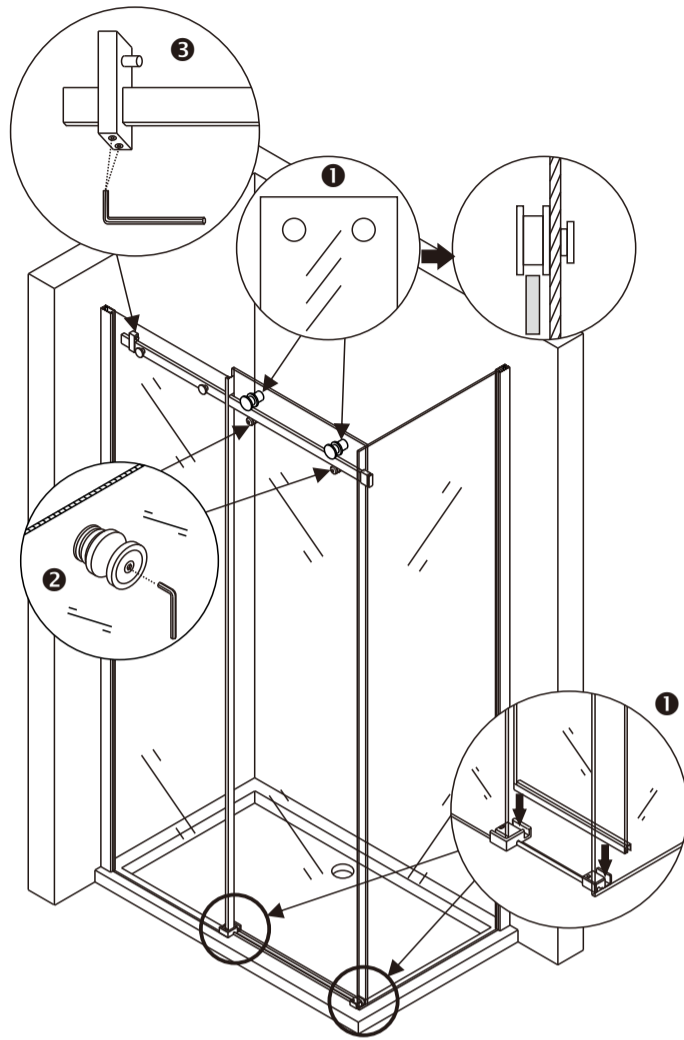

8

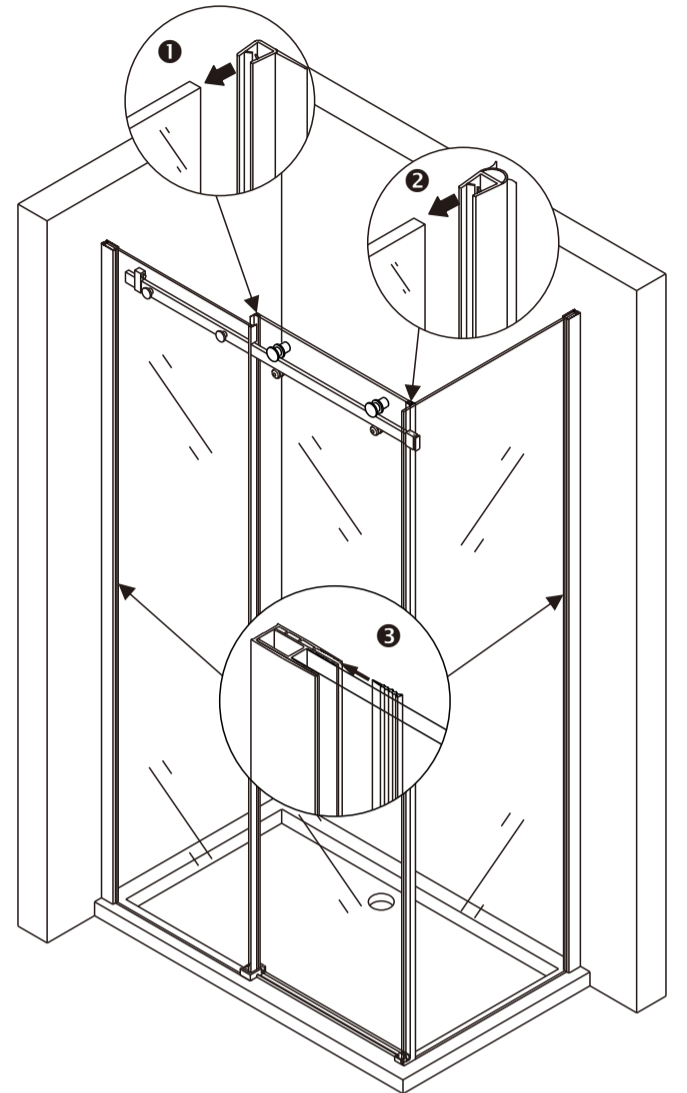

9

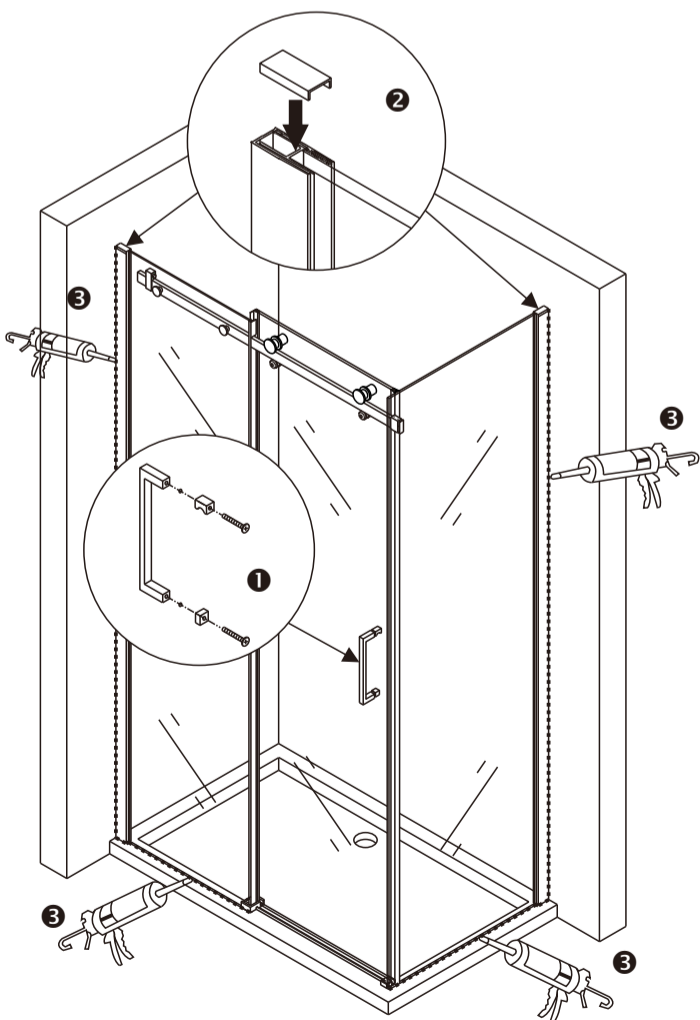 

10

11

12