

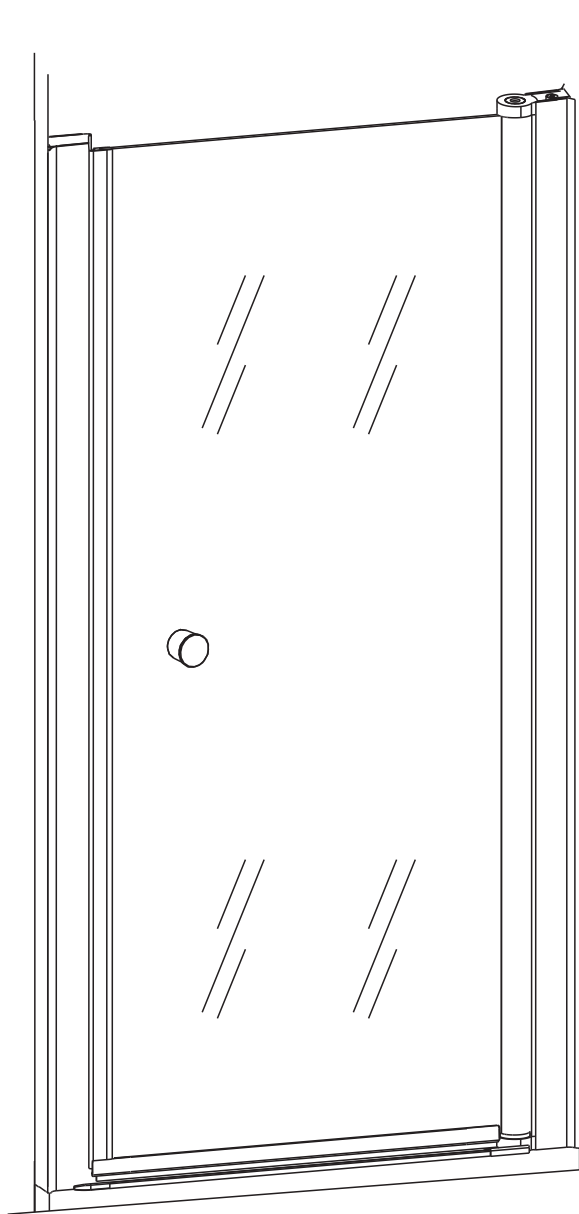
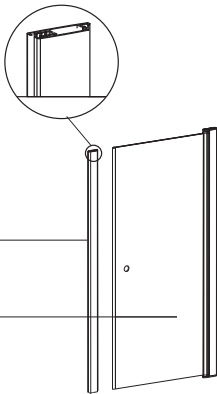





Návod na inštaláciu sprchových dverí Sanovo T1.




NO.	Designation	Pieces	NO.	Designation	Pieces	
		X1 X1				
			9		X1	
			10		X1	
			11.1 11.2 11.3 11.4		X1 X1 X1 X1	
			12		X1	
3.1		X1	13	A. 1 A. 2	X1 X1	
3.2		X1		B. 1 B. 2 B. 3 B. 4	X2 X2 X1 X1	
4.1		X1		C. 1 C. 2 C. 3 C. 4 C. 5 C. 6	X1 X2 X2 X4 X1 X1	
4.2		X1		D. 1 D. 2 D. 3 D. 4 D. 5 D. 6	X2 X2 X1 X4 X2 X1	
5	 Ø8	X6+1		14.1 14.2		X1 X1
6	 ST4X35	X6+1		15		X1
7	 ST4X10	X4+1				
8		X4+1				

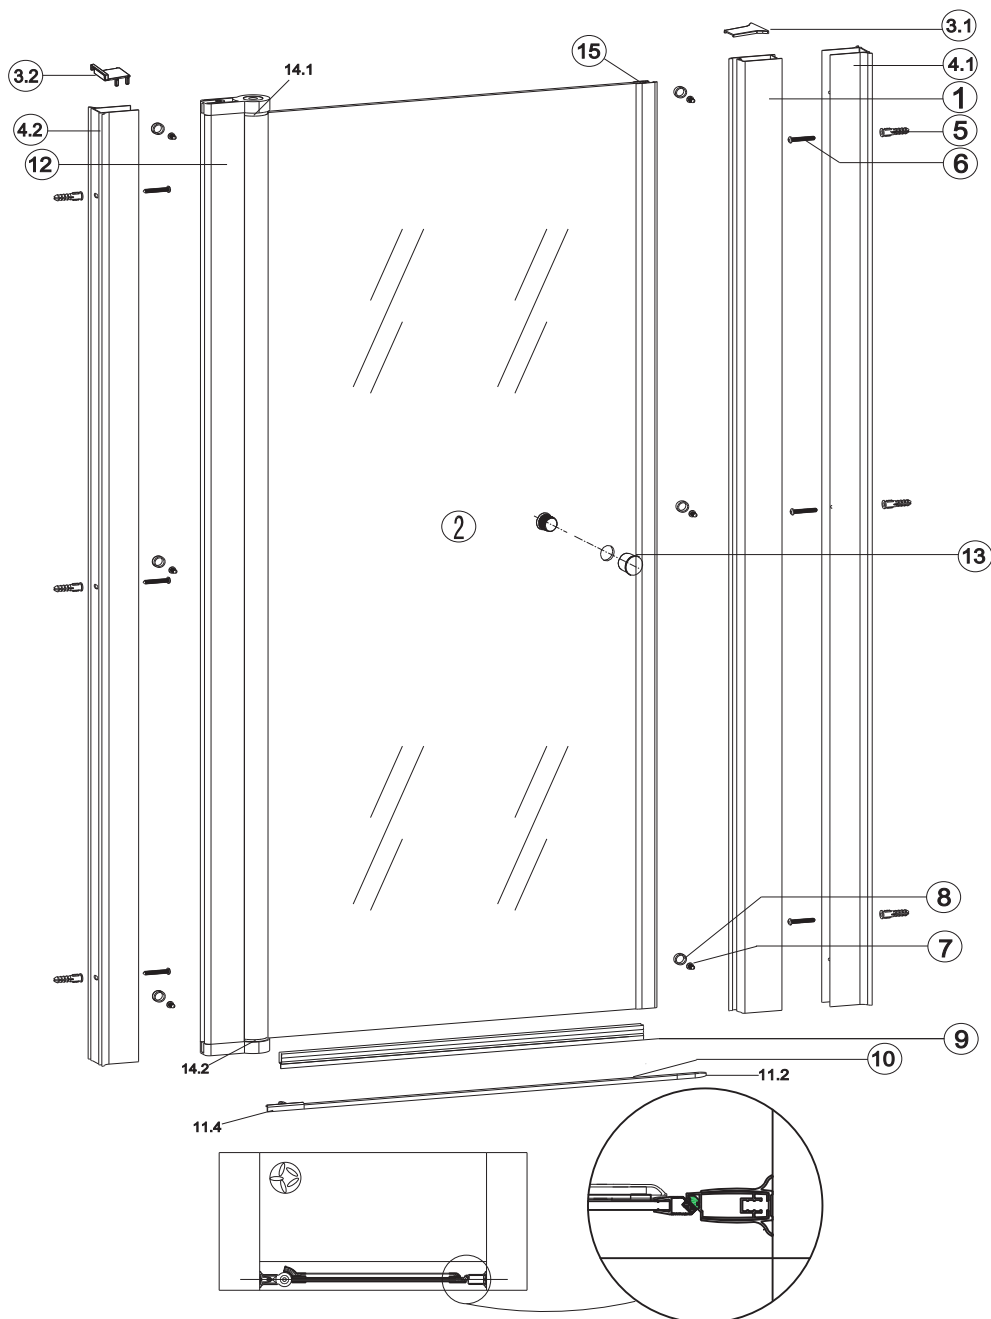


L01

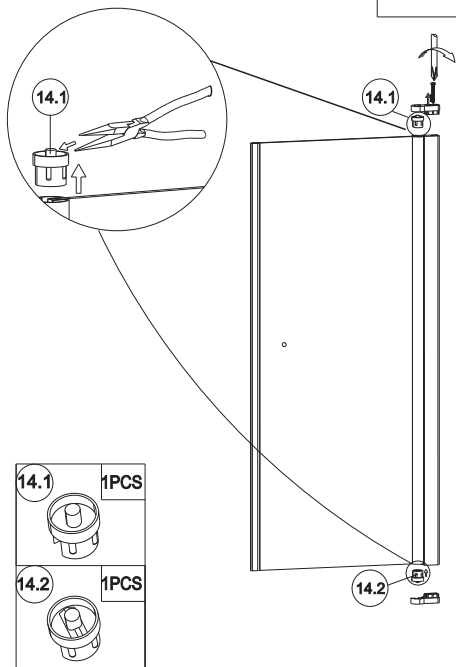

L02

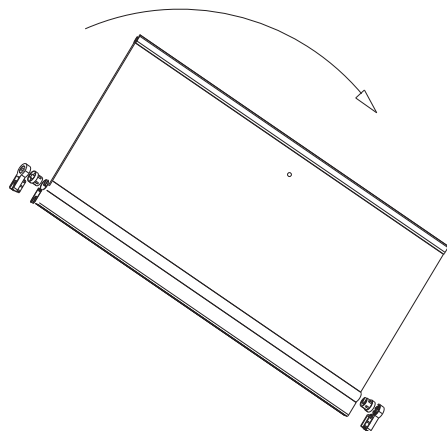

L03

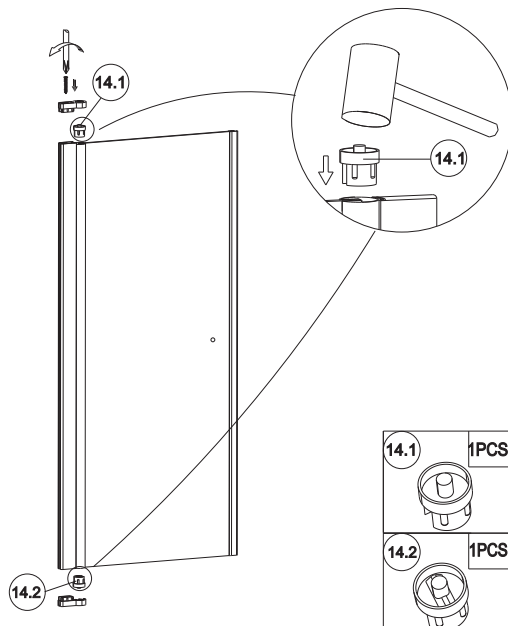

L04



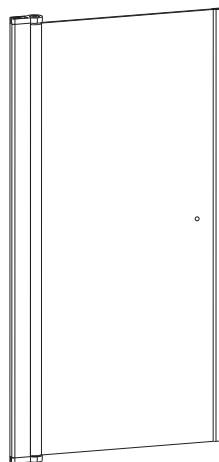


Diagram 1 illustrates the assembly of the upper part of the frame. A circular inset provides a close-up view of a 28mm drill bit (6) being used to drill a hole into a vertical post (4.1). A screw (5) is shown being inserted into the hole. A circular callout shows a cross symbol and the text "ST4X35". The main diagram shows the frame structure with various parts labeled with circles and numbers.






05

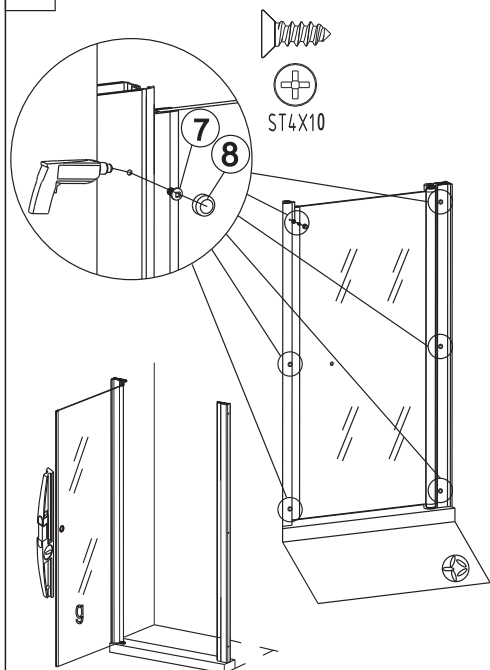

06

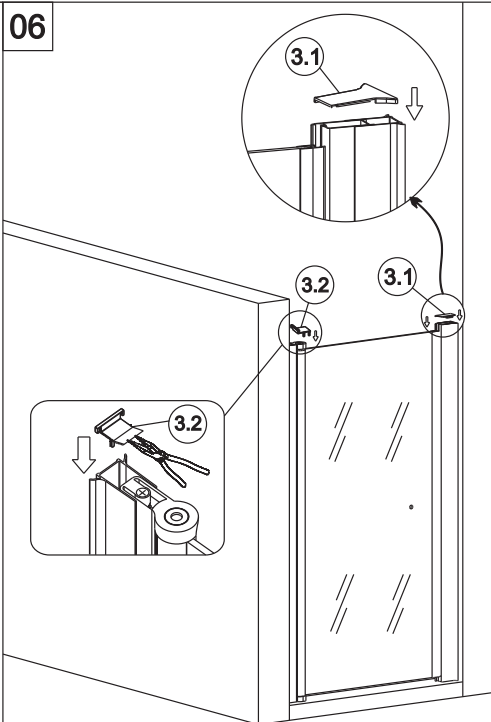

07

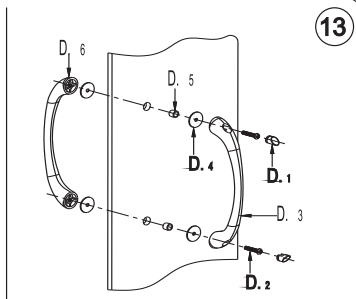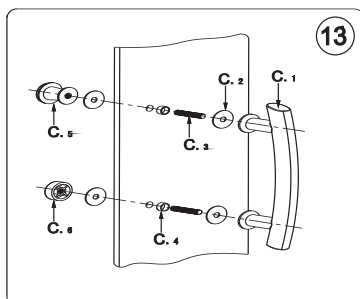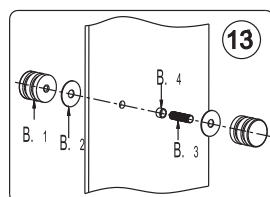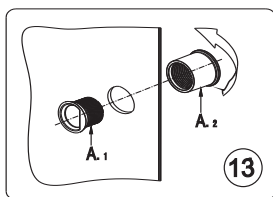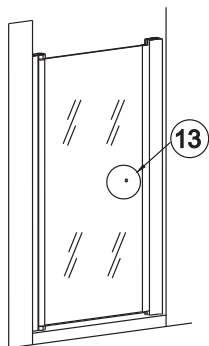

08

